


CID 2000

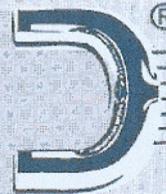

CLEANER - ACIDIFIER - SANITISER

CID 2000 especially for decontaminating drinking water and for the removal of biofilm from drinking water systems such as pipelines, tanks, drinking fountains and drinking troughs.

DIRECTIONS FOR USE:

1. For cleaning the drinking water system

- Use CID 2000 at a dilution of 2%
- Contact time: 4-6 hours
- Rinse thoroughly with potable water afterwards

2. For acidification and decontamination of drinking water for consumption by birds and animals of any age : Use CID 2000 at a dilution of 300-400 ml per 1000 L of drinking water for (0.03-0.04%) 2 to 3 days per week every other day, or during high risk periods 3 to 4 consecutive days.

UN 3149 Hydrogen peroxide and peroxyacetic acid mixture, stabilized; 5.1,II

ATTENTION: Stop treatment with CID 2000 24 hours before vaccination

Don't use CID 2000 and medicines in the water at the same time

AD069C0

CID 2000 is based on stabilised hydrogen peroxide and organic acids. Only use teflon pumps. Never mix with other products.

R07 - May cause fire. R20/22 - Harmful by inhalation and if swallowed. R34 - Causes burns.

S03/07 - Keep container tightly closed in a cool place. S24 - Avoid contact with skin. S26 - In case of contact with eyes, rinse immediately with plenty of water and seek medical advice.

S28 - After contact with skin, wash immediately with plenty of water. S35 - This material and its container must be disposed of in a safe way. S36/37/39 - Wear suitable protective clothing, gloves and eye/face protection. S45 - In case of accident or if you feel unwell, seek medical advice immediately (show the label when possible).



Corrosive

Oxidizing.

CID LINES NV/SA

Waterpoortstraat 2, 8900 Ieper - Belgium

Tel. +32 (0)57 21 78 77

Fax +32 (0)57 21 78 79

Internet: <http://www.cidlines.com>

CID LINES
INNOVATIVE HYGIENE SOLUTIONS

3.1215v1